Default Character Mapping

When migrating from CADSTAR, the following mapping is applied, by default, to characters. This is applied after any individual character mapping is done.

CADSTAR Character	eCADSTAR Character
€	EUR
f	f
II	П
+	+
‡	++
^	۸
<u>%</u> Š	Pm
<u> </u>	S <
Œ	OE
Ž	Z
1	1
ı	ı
и	11
"	11
•	
_	-
~	~
TM	TM
Š	S
>	>
œ	oe
ž	Z
Ÿ	Υ
NBSP	Space
i	Space
¢ £	С
£	GBP
¤	\$
¥	Υ
<u> </u>	I
<u>§</u> 	Space
	11
©	(C)
а	a
«	<<
٦	Space

SHY	Space
®	(R)
-	-
0	degs
±	+/-
2	^2
3	^3
,	ı
μ	u
¶	Space
•	
	_
1	^1
0	^0
»	>>
1/4	(1/4)
1/2	(1/2)
3/4	(3/4)
1/4 1/2 3/4 ¿ À Á	Space
À	A
Á	A
Â	А
Ã	A
Ä	Ae
Å	А
Æ	AE
С	S
È	E
Ã Ä Å Æ Ç È É É	E
Ê	E
Ë	E
ì	I
ĺ	I
Î	I
i Ï	l I
Đ	EDH

Ñ	NY
Ò	0
Ó	0
Ô	0
Õ	0
Ö	Oe
×	Х
Ø	0
Ù	U
Ú	U
Û	U
Ü	Ue
Ñ Ò Ó Ô Ô Ö Ö × Ø Ù Ú Ú Û	Υ
Þ	b
ß	SS
à	a
á	а
â	а
ã	а
ä	ae
å	a
æ	ae
Ç	S
ç è é ê	е
é	е
ê	е
ë	е
ì	I
í	i
î	i
ï	i
ð	edh
	ny
ñ ò ó ó	0
ó	0
ô	0
L	

õ	0
ö	oe
÷	/
Ø	0
ù	u
ú	u
û	u
ü	ue
ý	У
þ	b
ÿ	У